

Technical Datasheet



WT.02-CON.USB.01

Adapter Cable

Description

The WT.02-CON.USB.01 is an adaptor for controlling units with a KEM interface (WT.02, VTC) by a computer via USB.

Operation

Disconnect the M12 cable from the VTC or WT and connect the cable of the WT.02-CON.USB.01.

Note:

For an VTC with the 8-pin M12 connector an adaptor is required.

Set the rotary switch in the WT.02-CON.USB.01 to "INT" to power the VTC or WT from the USB interface.

If the supply current of the VTC or WT is to be measured, set the switch to "DAM" and connect a current meter between pin 2 and 5 of the connector "CTL OUT".

In systems, where only the current and not the frequency output of the VTC or WT is used, the WT.02-CON.USB.01 can be used for inline monitoring. Set the rotary switch to "off" and connect the control cable to the connector "CTL OUT".

For further information refer to the manual EasyControl.

Connect the USB connector to a USB plug of your computer.

Start EasyControl (or a similar control program) on your computer.

Technical Data

USB Version	USB 2.0
Cable Length	1 m
Modes of Operation	Supply via USB without current measurement Supply via USB with current measurement Inline monitoring.

Ordering Information

WT.02-CON.USB.01	USB adaptor for WT.02 and VTC
------------------	-------------------------------



Küppers Elektromechanik GmbH

www.kem-kueppers.com

info@kem-kueppers.com

KEM Headquarters

Liebigstraße 5
85757 Karlsfeld
Germany

T. +49 8131 59391-0
F. +49 8131 92604

info@kem-kueppers.com

KEM Manufacturing Center

Wetzeller Straße 22
93444 Bad Kötzing
Germany

T. +49 9941 9423-0
F. +49 9941 9423-23

production@kem-kueppers.com

KEM Sales

Liebigstraße 5
85757 Karlsfeld
Germany

T. +49 8131 59391-100
F. +49 8131 92604

sales@kem-kueppers.com

KEM Service & Repairs

Wetzeller Straße 22
93444 Bad Kötzing
Germany

T. +49 9941 9423-37
F. +49 9941 9423-24

service@kem-kueppers.com

*More distributors & partners can be found at:
www.kem-kueppers.com*